


COMPUTER CHAIR A9 INSTALLATION

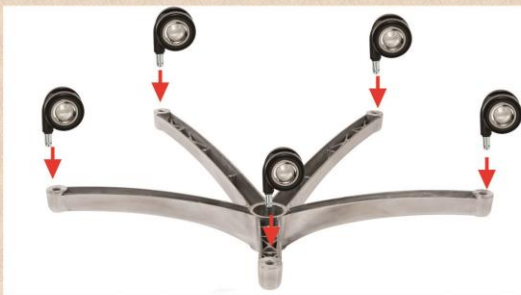

01. Insert the foot of the pulley into the hole of the five star foot



02. The pneumatic rod is aligned with the hole sleeve



03. Handrails use the installation of three short screws



04. Install the mechanism with four black short screws and mat



05. intall the backrest with three silver long screws



06. Insertion of foot rod into chassis hole



07. Use two long screws and tighten the screw mounting head



08. Finish

Installation Tips: more than a long screw for standby

1. installation is in order to avoid scratches, it is recommended that you put on gloves installed.
2. install each step, please put all screws installed after positioning, then tighten the screws.
3. on the wheel of the small iron wire do not take down, is directly into the, if the strength is not enough, you can use a small rubber hammer knock.
4. after the completion of the installation, if the chair can not be lifted, because the air pressure lever and the chassis under the seat is not tightly set, so hard to sit more than a few times on it.